

WARNING

Warning: Electrical Safety

This appliance draws up to 1450 W from a grounded mains outlet. Improper electrical handling carries a risk of shock or fire.

- Plug the machine directly into a grounded wall outlet. Do not use extension cords, multi-way adapters, or ungrounded circuits.
- Never submerge the machine, its base, or its power cord in water. Wipe external surfaces with a damp cloth only.
- Unplug the machine before refilling the water reservoir if it has been removed from its housing.
- If liquid enters the housing or the machine is dropped, unplug it immediately and have it inspected by an authorized technician before further use.
- Do not open the housing. It contains no user-serviceable parts; opening it voids the warranty and exposes mains voltage.

