

WARNING

Warning: Pressurized Boiler

The boiler operates at up to 9 bar during extraction and maintains residual pressure for several minutes after use. Opening or obstructing pressurized components can cause sudden release of hot water and steam.

- Do not remove the portafilter during extraction. Wait until the pump stops and the displayed pressure returns to zero.
- Never block the steam wand tip with a cloth, finger, or container during purging.
- Do not unscrew the steam-wand tip, anti-vacuum valve, or any boiler fitting while the machine is hot.
- If the machine begins to vent steam from unusual locations (seams, top panel, drip-tray area), switch it off immediately at the wall and contact service.

