

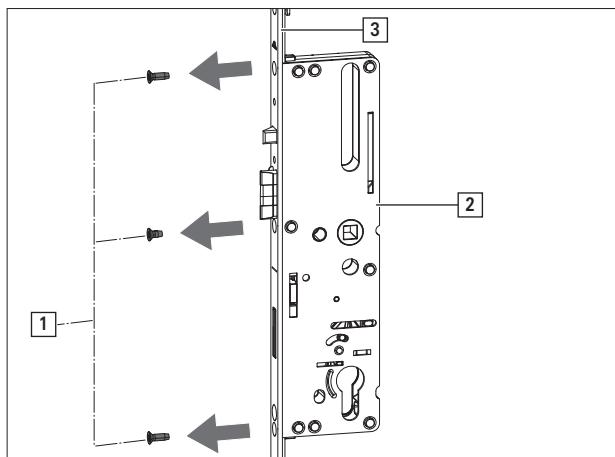
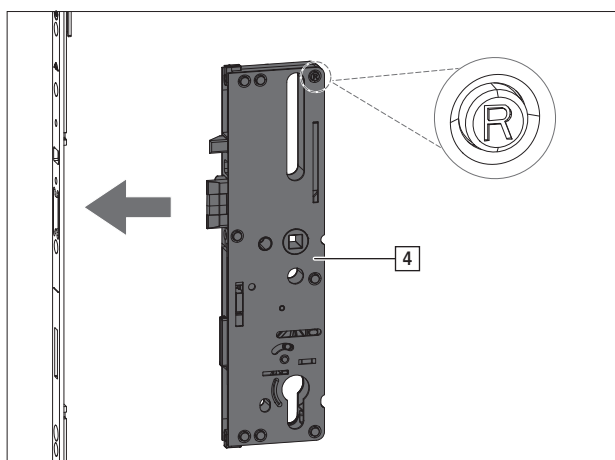


Roto Safe A | A700

Replacement main lock

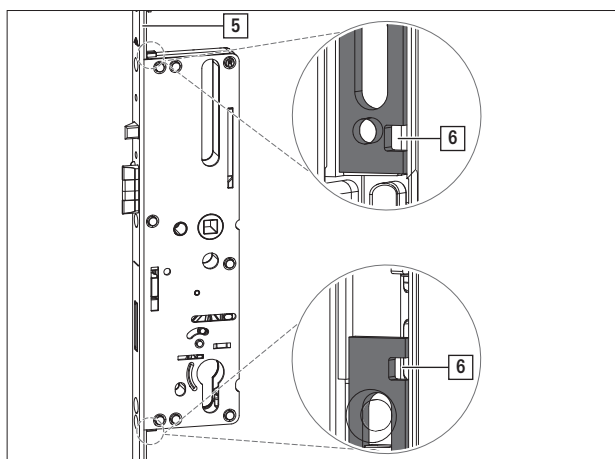

Replacement when removed

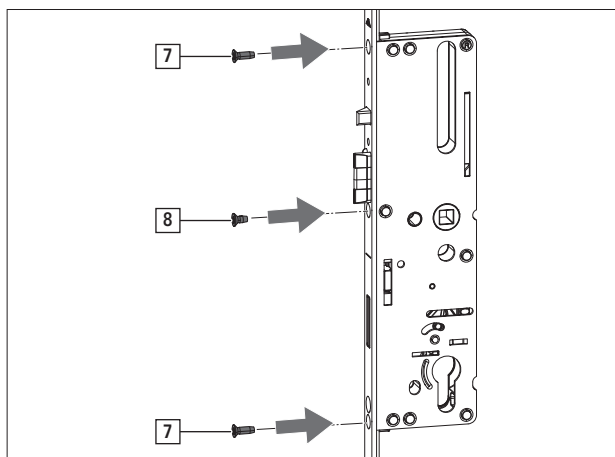

INFO

The system certificate and warranty become void when the replacement main lock is installed.

1. Undo three screws [1].
Tool: T20 hexalobular socket
2. Remove the main lock [2] from the faceplate [3].
3. Insert the replacement main lock [4] marked with "R" into the faceplate.

4. Mount the connecting rod [5] in the connector [6] of the replacement main lock.



INFO

Position the replacement main lock so that it is flush with the connecting rod and faceplate.

5. Fit it with three screws.
[7] M4 x 12
[8] M4 x 8
Torque: max. 4 Nm



INFO

For further information see IMO_505.


Replacement when installed




INFO

The system certificate and warranty become void when the replacement main lock is installed.

1. Remove the profile cylinder [1], door lever handle [2] and pull handle [3].

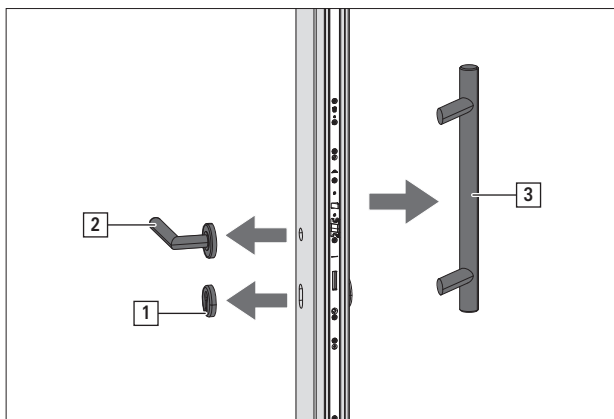


2. Undo all screws on the multipoint lock [3] and remove the entire faceplate from the door profile.

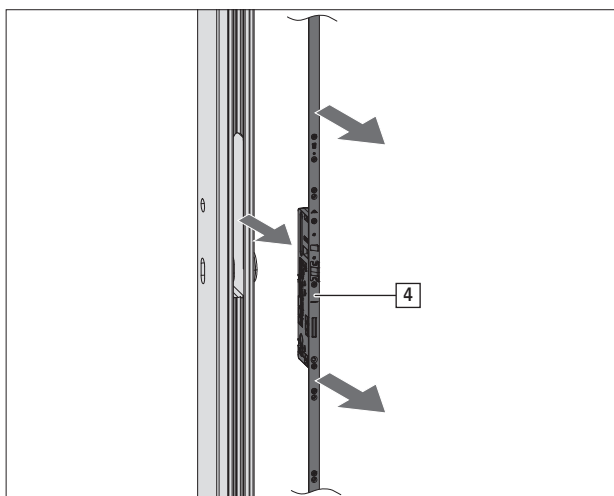


3. Perform steps 1 to 5 from "when removed".

4. Insert the faceplate into the door profile. Ensure that it is flush.

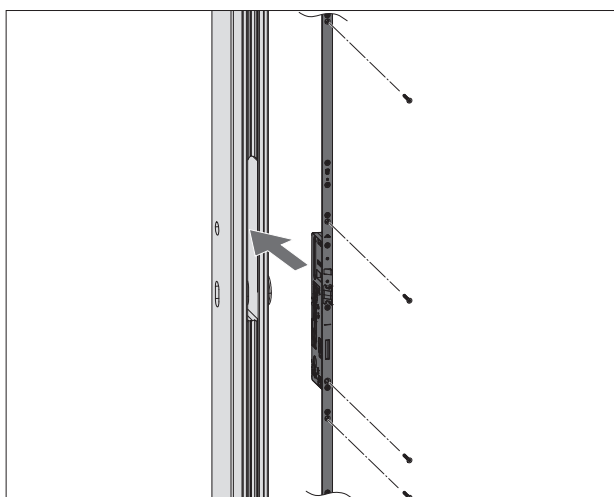

5. Fasten all screws on the multipoint lock.

6. Install the profile cylinder, door lever handle and pull handle.

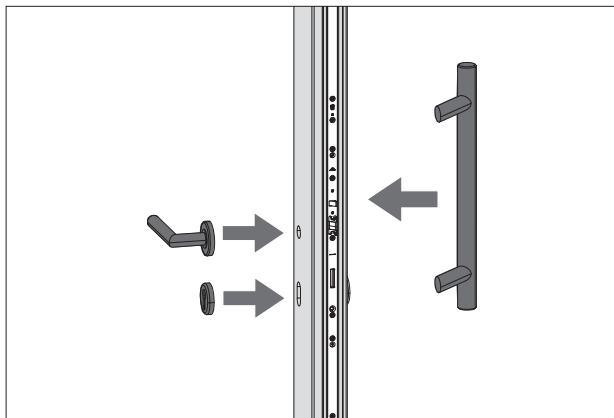

INFO

For further information see IMO_505.